


BASIC CONFIGURATION OF SWITCH USING CONSOLE CONNECTION

Steps to follow:


1. Create a link between switch and PC which acts as its console using console type of communication on switch side and RS232 on PC side.

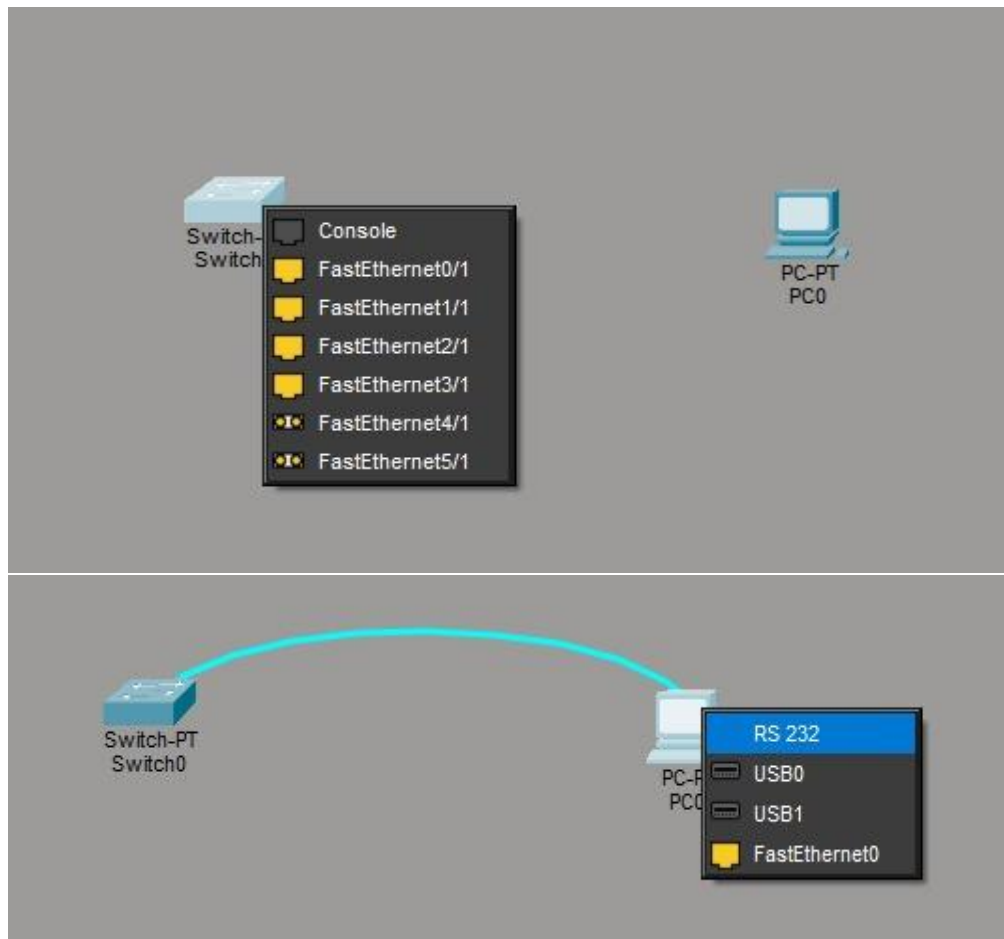

2. Click on PC, go to desktop tab then open terminal. Now, in terminal click on ok.
3. Type **enable** in terminal and press enter.
4. Type **configure terminal** or **configure t** and press enter.
5. Set hostname using **hostname MySwitch**.
6. Set password using **enable password 1234**.
7. Set banner using **banner motd \$**.
8. Type any **message** ending with the character used with motd (\$).
9. Type **exit twice** to leave configuration mode.
10. Type **enable** and enter the password when prompted.

Hence, by these steps the switch has been successfully connected to the PC and basic configuration (hostname, password, and banner) has been applied through the terminal.

PRACTICAL-5

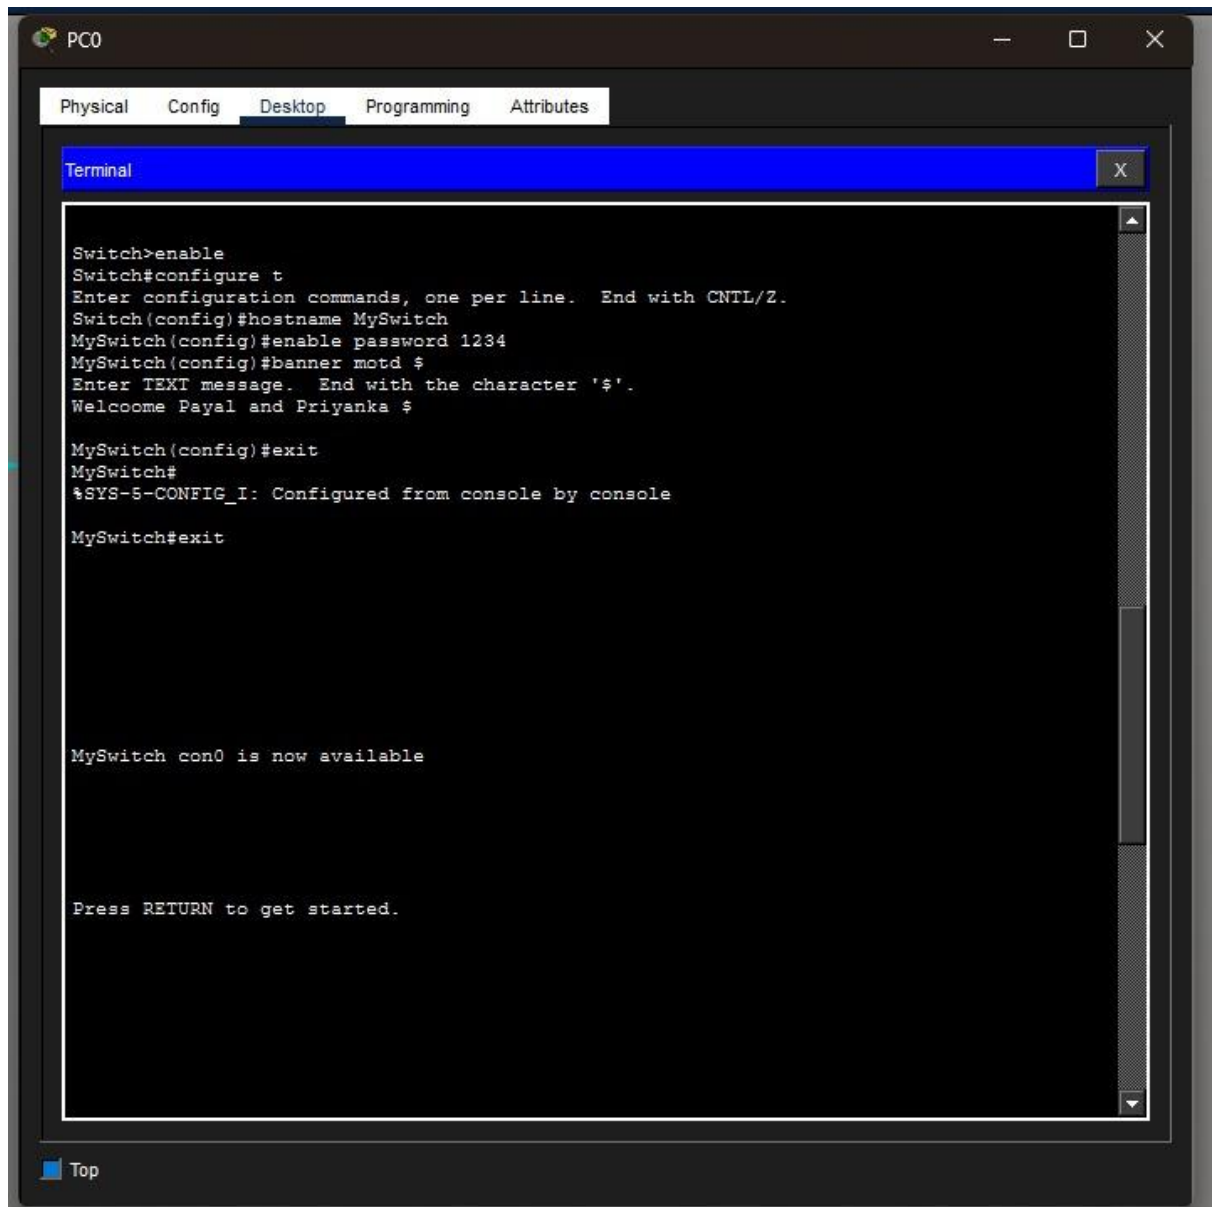

PRACTICAL-5

